



## HOW 2 INSTRUCTIONS

**Engine type:** all RV gasoline generators that run off the main fuel tank

**Product(s):** Sea Foam Motor Treatment, Sea Foam Spray

**Part number(s):** SF16, SS14

**Quantity:** 1 can of each



## RV GENERATOR CLEANING, 'CAN & HOSE' METHOD

### Getting Started

Application requires a small amount of fresh gasoline in a portable fuel can, wrench with spark plug socket, screwdriver, a 3 to 4 foot section of matching fuel hose (standard is 1/4" diameter).

1. Start and warm up the engine to operating temp (5 minutes), then shut off.
2. Disconnect the fuel line before generator's fuel pump.
3. Connect the short section of matching fuel hose to the same location.
4. Add 1 can of Sea Foam and 32 ounces of fresh gasoline to the small fuel can (1 to 2 ratio), then insert and submerge the end of the short hose section in the mixture.
5. Start and run the engine on the high concentration mixture for 15 minutes. This allows Sea Foam to work through the carburetor circuits and chamber areas.
6. Shut off the engine to let the Sea Foam concentration hot soak in the chambers for 5 minutes.
7. After the 5 minute hot soak, start and run the engine for 5 more minutes. This is done to burn off the dissolved hydrocarbon residues (cleaning) and to lubricate the intake and chamber areas.
8. Shut off engine, reconnect main fuel line.

### For seasonal engine storage

For an added measure of lubrication and corrosion protection, remove each spark plug and spray a long burst (3 seconds) of Sea Foam Spray into each cylinder cavity. Reset plugs/wires when done.

**When added to RV generator fuel systems, Sea Foam Motor Treatment works all year long to help:**

- ✓ stabilize fuel by preventing the formation of petroleum gum and varnish
- ✓ clean hydrocarbon residues and deposits from carburetor circuits, intake and chamber areas
- ✓ lubricate intake areas and upper cylinders to protect from long-term wear and corrosion
- ✓ preserve ignition vapors so engines start easier

### Maintenance Tips:

- Sea Foam in your tank at all times is always cleaning and lubricating the entire fuel system
- Sea Foam Spray in your cylinder cavities works to lubricate, resist corrosion and dry out, helps to nourish and protect seals

WATCH THE VIDEO



Sea Foam Official

[www.SeaFoamSales.com](http://www.SeaFoamSales.com)

© 2017 Sea Foam Sales Company. All rights reserved.